

Lyric™ Gateway Starter Guide

Getting to Know Your Lyric Gateway

The Lyric Gateway combines a security system and home automation with flexibility to operate your system directly from the Gateway's Touchpad or from a smart device (smart phone, tablet, PC, etc.) using either the **MyHome Gateway™** App or **Total Connect™** App.

IMPORTANT!

If the Lyric Gateway is beeping rapidly when you enter the premises, an alarm has occurred during your absence and an intruder may still be on the premises.

LEAVE IMMEDIATELY and CONTACT THE POLICE from a nearby safe location.

For full details of all user functions, please see the system's Quick User Guide and User Reference Guide located online at:





<http://www.security.honeywell.com/hsc/products>

These manuals also available from your installer upon request.

IMPORTANT SECURITY NOTICE

If using wireless keys: your key fob is similar to your keys or access card. If lost or stolen, another person can compromise your security system. Immediately notify your Dealer/Installer of a lost or stolen key fob. The Dealer/Installer will then remove the key fob programming from the security system.

A variety of options to operate your Gateway system:


Method	Used to operate...
	The Gateway's Touchpad Basic Security Functions
	The MyHome Gateway™ App (for on-site Wi-Fi® access) Security, Video and Automation Functions; Change system settings and add Z-wave components
	Your Total Connect™ Remote Services account (for remote access) Security, Video and Automation Functions
	Optional wireless keys (key fobs), Lyric keypads or smart devices Arm & Disarm Security Functions

Download and install the **MyHome Gateway™** App and the **Total Connect™** App from your smart device's App Store.




Gateway Menu Mode

The Gateway Menu Mode provides options to add and delete smart devices from your system or change the system Wi-Fi network.

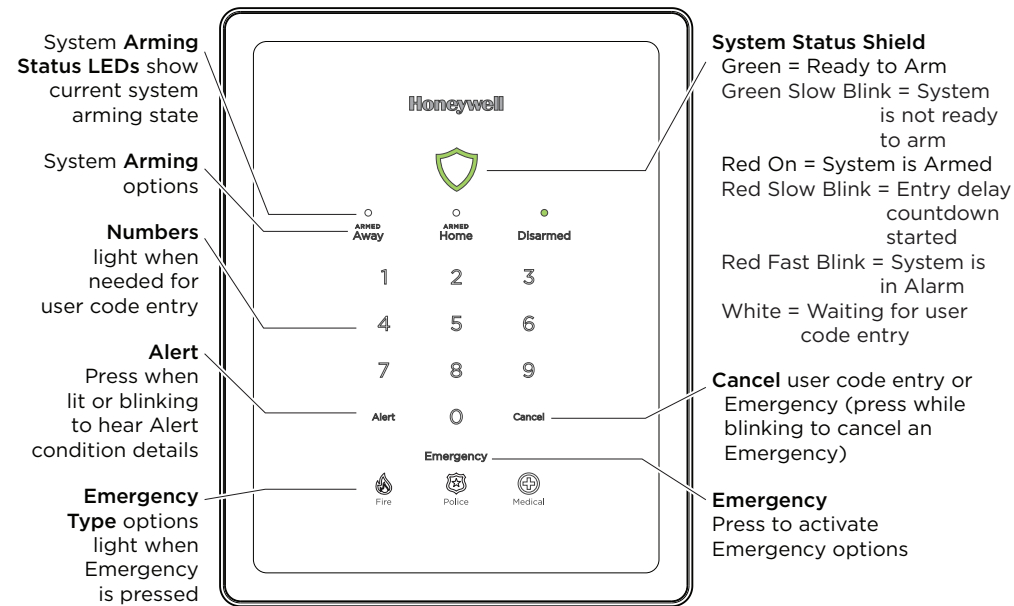To hear a list of Menu Mode options: when the System is disarmed and the number keys are off, enter the **Master Code** and **11**. Enter the two digit code to access the desired menu option.



Using your Lyric Gateway Touchpad

Function	Press...	Then enter...	The system...
Arm your system	ARMED Away	your user code	Arms in Away mode
	ARMED Away for 3 seconds	---	Quick Arms in Away mode (if programmed to do so)
	ARMED Home	your user code	Arms in Home mode
	ARMED Home for 3 seconds	---	Quick Arms in Home mode (if programmed to do so)
Disarm the system	Disarmed	your user code	Disarms
Signal an Emergency	Emergency then select Emergency Type  Fire  Police or  Medical		Emergency Type options light. If programmed to do so, notifies the monitoring company that a fire/police/medical emergency exists.
	Cancel (while blinking)		Cancels the Emergency - only available when the Cancel button is blinking
	Alert		Announces system Alert conditions along with suggested actions

Switching Arming Modes:

When the system is Armed or during Entry Delay, you can change the arming mode (Away or Home) without having to disarm the system first. Simply press the desired Arming button and enter a valid user code. This feature is available only from the Gateway Touchpad or a Wireless Key:

Auto-Home Mode Operation: If your system is programmed to do so, it will automatically arm in Home mode if you select Armed Away but no one opens an exit-delay door.

System Sounds

Function	Description
Beeping	accompanies entry/exit countdowns, pressed buttons and other functions*
Volume	adjustable for voice announcements, chimes and most sounds (adjusted through the MyHome Gateway™ App)
Alarms	signaled by the Gateway's built-in sounder and external sirens/speakers (if installed). Alarm volume is not adjustable.

NOTE: A beep every 45 seconds indicates one of your wireless devices has a low battery condition. Use **MyHome Gateway** App to see which device(s) need new batteries.

To operate additional features of your Gateway system:

Use either the **MyHome Gateway™** App or the **Total Connect™** App to remotely operate your Gateway system from a smart device.

Add smart devices to your system using the MyHome Gateway App

Up to 8 smart devices can operate your Gateway system with the **MyHome Gateway** App.


How to add smart devices to your system using the MyHome Gateway App

1. Download the Honeywell **MyHome Gateway** App to the smart device(s) that will be used to control your system.
2. Ensure each smart device is connected to the same Wi-Fi network the Gateway is on (check **Settings > Wi-Fi** on the device).
3. On the **Gateway** keypad, enter the **Master code** and **2 1** to ensure the Gateway is in enrollment mode.
4. Launch the **MyHome Gateway** App on a device. The App will display a six-digit enrollment number.
5. Enter that six-digit number on the **Gateway** keypad.
6. When prompted, enter a valid user code on the **MyHome Gateway** App screen. The screen will confirm the enrollment success and open the **MyHome Gateway** App Home screen.
7. Follow the prompts on screen and throughout the User Guide / User Reference Guide to operate your system with the **MyHome Gateway** App.


Using the MyHome Gateway App to operate your system

Start the **MyHome Gateway** App and refer to the tables below.


To manage System Security, Automation, Smart Scenes, Video and Settings:

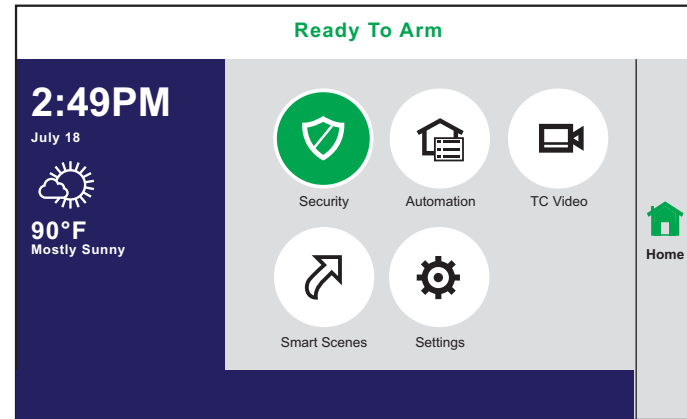

Operate you Security functions with the **MyHome Gateway** app

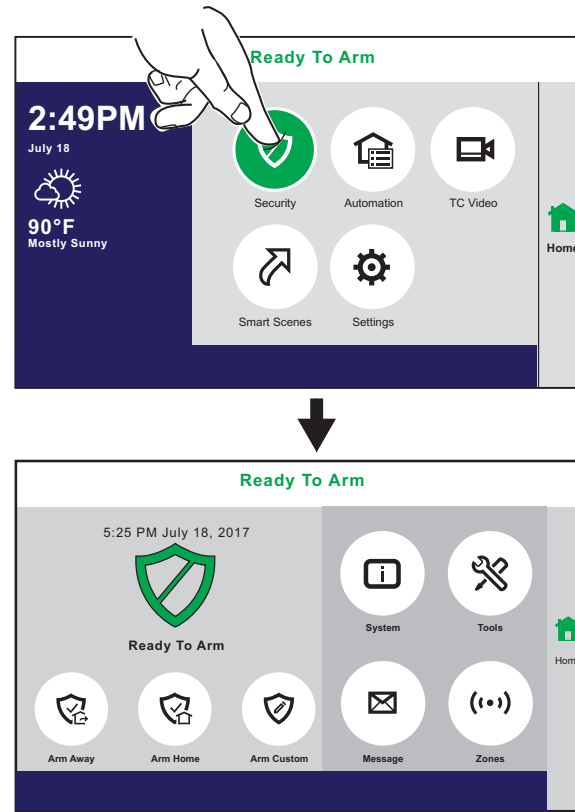

To set various System Settings:

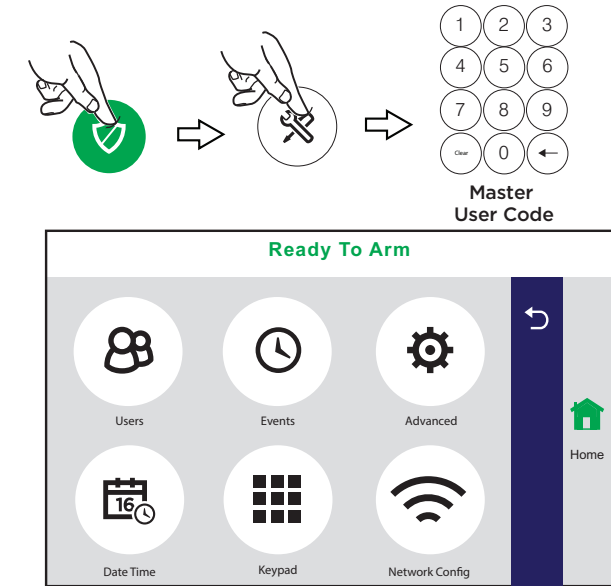

Function	Press...	Then...	Allows you to...
Security		See the next Table	Operate and manage the security features of your Gateway. See the next table.
Automation		---	Manually operate your Z-Wave devices
		✓ and ✗	Add or delete Z-Wave Devices
Video		---	View and configure system cameras; manage video recovery functions
Smart Scenes		Master User Code	Set up automation scenes to operate your system for convenience, comfort, energy savings and security
Settings		---	Adjust the Gateway touchpad and LED brightness and the announcements and chime volume

Function	Press...	Then...	The system...
Arm your system		(Away) + user code	Arms in Away mode
		(Home) + user code	Arms in Home mode
		(Custom) select the zones to bypass + user code	Custom Arming selections: Arm with selected zone bypassed (and unprotected), also choose to arm with Entry Delay or Instant ¹ , and Silent Exit ²
Disarm system & silence alarms	Security	(Disarm) + enter user code	Disarms and silences sounds
Manage Zones		Select zones to bypass or clear bypass for zones. When prompted, enter a valid user code	
Check System		---	Displays a list of system trouble conditions (e.g., low battery or cover tamper)
Signal an Emergency			Use the Gateway Touchpad Emergency options or, if programmed to do so, use your wireless key (key fob)

Function	Press...	Then...	Allows you to...
Mange User Codes		Master + Edit Guest + Edit Duress + Edit	Edit or delete a code for the respective user type.
		Add New	Assign a user name and code for other system users.
Press Save when done.			
Check Events		---	View system event logs
Advanced Settings		---	Access software upgrades, perform tests and other user maintenance functions.
Adjust Date and Time		---	Set the system's calendar and clock
Keypad		---	View a list of smart devices paired to your Gateway
Network Config		---	Configure Wi-Fi connection to the Gateway

NOTE: The **MyHome Gateway** App requires connection to the Gateway via the premise's Wi-Fi router (Ethernet cable or Wi-Fi). The **Total Connect** App requires internet or cellular connection for remote access to the Gateway.

¹ In Arm Custom mode, deselect Entry Delay to choose Arm Instant. In this mode, an alarm will sound immediately if an entry/exit door is opened.

² Silent Exit means no beeps will sound during the Exit Delay when arming the system.

Ref: LCP300-L/LCP300-LC



800-22261 10/16 Rev A Part 1 Draft071916



2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2016 Honeywell International Inc.
www.honeywell.com/security